 


TUBI A LED CON ALIMENTATORE INCORPORATO

LED Tubes with driver inside

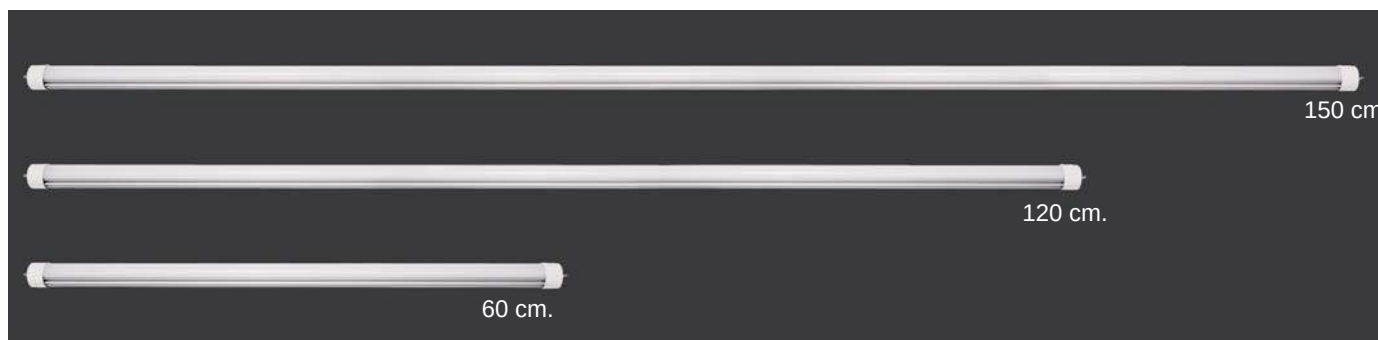


ART.	Dimensioni Sizes	Potenza (W) Power (W)	Fluorescente equival. (W) Fluorescente equival. (W)	Temp. colore (K) Color temp. (K)	Flusso (Lm) Flux (Lm)	Ra Ra	LED Driver LED Driver
LA-T8L-2ETPW	60 cm	10	18	5500-6500	1000	73	input 100/240V AC output 12V DC
LA-T8L-2ETWW	60 cm	10	18	2800-3500	800	75	input 100/240V AC output 12V DC
LA-T8L-4ETPW	120 cm	20	36	5500-6500	2000	73	input 100/240V AC output 24V DC
LA-T8L-4ETWW	120 cm	20	36	2800-3500	1800	75	input 100/240V AC output 24V DC
LA-T8L-5ETPW	150 cm	24	58	5500-6500	2400	73	input 100/240V AC output 24V DC
LA-T8L-5ETWW	150 cm	24	58	2800-3500	2200	75	input 100/240V AC output 24V DC

Attacco / Socket: G13

Alimentatore incluso / Converter included

Schema di installazione

 Installation diagram

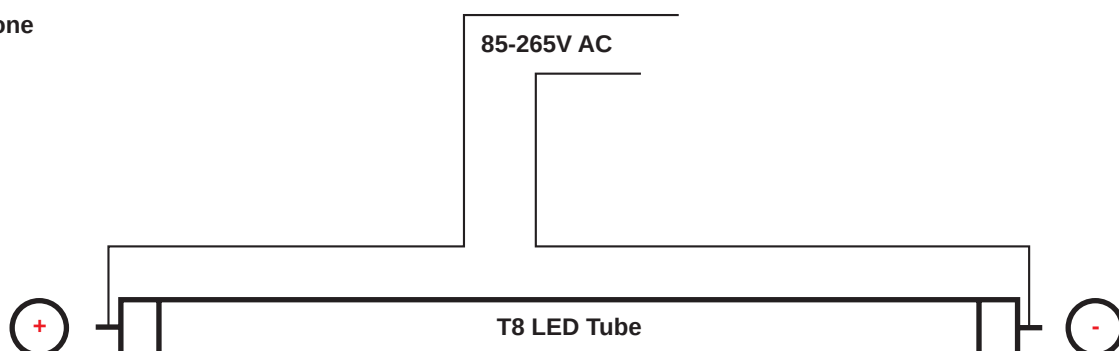

Per sostituire la lampada fluorescente col tubo a LED / To replace the fluorescent lamp white LED Tube:

- Rimuovere lo starter, bypassare o rimuovere il ballast
- Remove the starter, bypass or remove the ballast

TUBI A LED

LED Tubes




ART.	Dimensioni Sizes	Potenza (W) Power (W)	Fluorescente equival. (W) Fluorescente equival. (W)	Temp. colore (K) Color temp. (K)	Flusso (Lm) Flux (Lm)	Ra Ra	LED Driver LED Driver
LA-T8L-2ETPW	60 cm	10	18	5500-6500	1000	73	input 100/240V AC output 12V DC
LA-T8L-2ETWW	60 cm	10	18	2800-3500	800	75	input 100/240V AC output 12V DC
LA-T8L-4ETPW	120 cm	20	36	5500-6500	2000	73	input 100/240V AC output 24V DC
LA-T8L-4ETWW	120 cm	20	36	2800-3500	1800	75	input 100/240V AC output 24V DC
LA-T8L-5ETPW	150 cm	24	58	5500-6500	2400	73	input 100/240V AC output 24V DC
LA-T8L-5ETWW	150 cm	24	58	2800-3500	2200	75	input 100/240V AC output 24V DC

Attacco / Socket: G13

Alimentatore incluso / Converter included

Schema di installazione

 Installation diagram

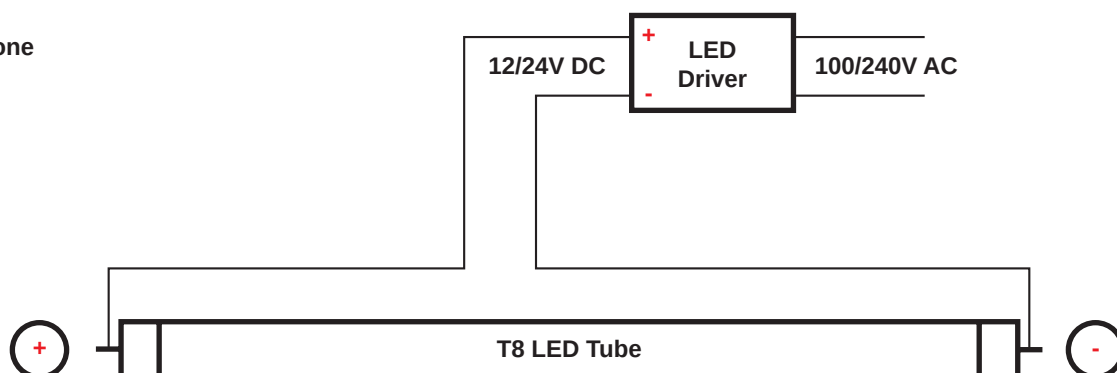

Per sostituire la lampada fluorescente col tubo a LED / To replace the fluorescent lamp with LED Tube:

• Rimuovere lo starter, bypassare o rimuovere il ballast - Installare il LED Driver

• Remove the starter, bypass or remove the ballast - Install the LED Driver

